

FIMS and FOUF



Clean Manufacturing: A Parametric Study of Airflow & Airborne Particle Performance for a 300-mm Loadport, Haifeng Zhang Ph.D., Sameer Abu-Za P.E., August 2003

FREE Product Information

FREE Magazine Subscription

TurnKey Conference

Article Index

Advertising Services

Web Directory Advertisers

Buyer's Guide

Wiping Surfaces Clean
ORDER Your Copy Today

Industry Organizations

Contact A2C2

Home

In this study, airflow and airborne particle tests for a 300-mm loadport (IsoPort™) are performed in an ISO per ISO 14644-1 standards, the objectives of these tests are to understand the effects of various factors on the performance of the IsoPort. Such factors include the gap size between the FOUF (Front Open Unified Pod) sl port plate, the FOUF/FIMS (Front-opening Interface Mechanical Standards) door opening speed profile, and t pressure between the enclosure and the ambient environment. It was found that there are two particle source open/close cycle. The first source is the ambient F AB air squeezed out of the space between the FOUF door as the FIMS door advances towards the FOUF door in the docked FOUF position. Depending on the gap size may either exit the system through the gap between the FOUF shell and port plate, or remain in the local area until the FOUF door is opened. In the latter case the contaminated ambient air may end up inside the FOUF as the enclosure as a result of FOUF/FIMS door movement. The second source is caused by ambient air infiltrat through the gap as a result of negative differential pressure created behind the FOUF door during its opening of gap size, FOUF door-opening speed profile, and mini environmental ambient air differential pressure on sy be presented and discussed in this paper.

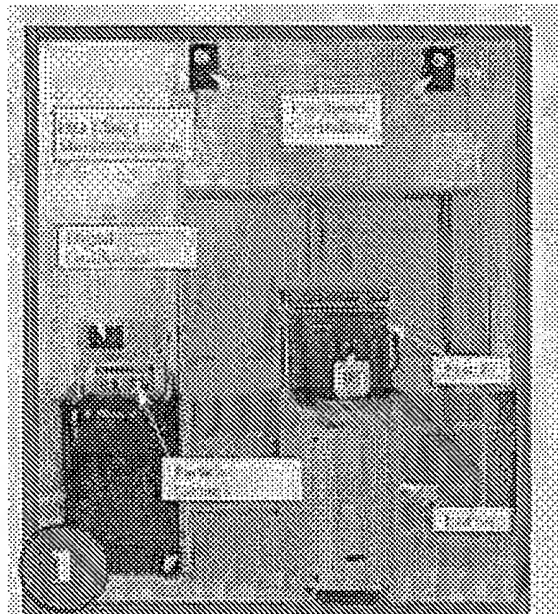


Figure 1: Experimental Setup.

State-of-the-art chip manufacturing requires more stringent airborne particle cleanliness specifications. This is shrinkage in line width feature size. As line width gets smaller, particles of smaller sizes become more detrimental to good die per wafer. The new ISO 14644-1 Standards therefore require equipment cleanliness certification to a particle size (0.1 micron) than the outdated FED-STD-209E Standards.

Loadports are part of the semiconductor equipment set used for automatic handling of silicon wafers through manufacturing cycle. Silicon wafers are isolated inside a sealed plastic enclosure (commonly referred to as SI wafers, FOUF for 300

This paper will focus on a 300-mm loadport (IsoPort). The FOUF open/close sequence of events for the IsoPort placed on the loadport, 2) the FOUF is latched to the advance plate, 3) the FOUF moves forward from its HOI to the port plate, 4) before the FOUF reaches the port plate (dock) position, the FIMS door moves backward a short distance, 5) the FIMS door moves forward towards the docked FOUF and the FIMS door latches to the FOUF door is opened, and the combined FOUF/FIMS door move into the mini-environment enclosure, 7) the F move downward to STAGE position, 8) the FOUF/FIMS doors move towards docked FOUF, 9) FOUF is close

back to HOME position. The various steps have significant effects on the overall cleanliness of the IsoPort. The FOW door opening and the FOUP/FIMS doors movement into the enclosure. In this paper, several parameters for the cleanliness of the IsoPort will be presented and discussed.

Experimental Setup

Figure 1 shows the experimental setup used throughout the study. It consists of an IsoPort and an ISO Class 7. The ambient surrounding the setup is ISO Class 7-8. The following equipment are used:


- * Met One A2100B Airborne Particle Counter (calibrated on 9/18/02)
- * Shortridge ADM-860 Air Data Multimeter (calibrated on 10/18/02)
- * ASHCROFT Pressure Sensor (0.1 inch-water)
- * Tektronk TDS3032 Digital Phosphor Oscilloscope

Air-borne particles are measured inside the enclosure locally at the gap between the FOUP shell and port plate inating from the space (ambient air) between the FOUP and FIMS doors, or particles brought in through the gap between the shell and port plate should be detected at the location shown in Figure 2a. Similar behavior will be seen if the sensor is placed at the opposite side of the port plate, or at the top or bottom sides, since the air "squeezing" effect is in both directions.

In order to understand the airflow behavior behind the FOUP door during its opening stroke and at the gap between the shell and the port plate, a highly sensitive, fast acting differential pressure sensor is used (ASHCROFT) which measures inches-H₂O. The differential pressure output of the sensor is displayed on a Tektronk TDS 3032 Digital Phosphor Oscilloscope. Should a negative differential pressure signal be observed at the gap, it would indicate that particle laden air is flowing into the enclosure through the gap. On the other hand, a positive differential pressure signal would indicate air flowing from the enclosure to the ambient through the gap. Figure 2b shows the two differential pressure sensor locations.

Several different pressure output signals for various conditions are recorded and analyzed. Table 1 is a summary of the cases studied. Case 1 is using a two-step door opening speed profile with a small initial door opening acceleration. Case 2 is using a two step door opening speed profile with a nominal acceleration setting. The gap between FOUP shell and the port plate is 0.5mm for Case 3 and is 2mm for all other cases. Case 4 is using a one-step door opening with the default acceleration of 5.0 inch/sec². For all cases studied, the door closing stroke is a one-step speed profile at an acceleration of 5.0 inch/sec².

The speed profiles of the FOUP/FIMS doors used in each case are shown in Figure(3).

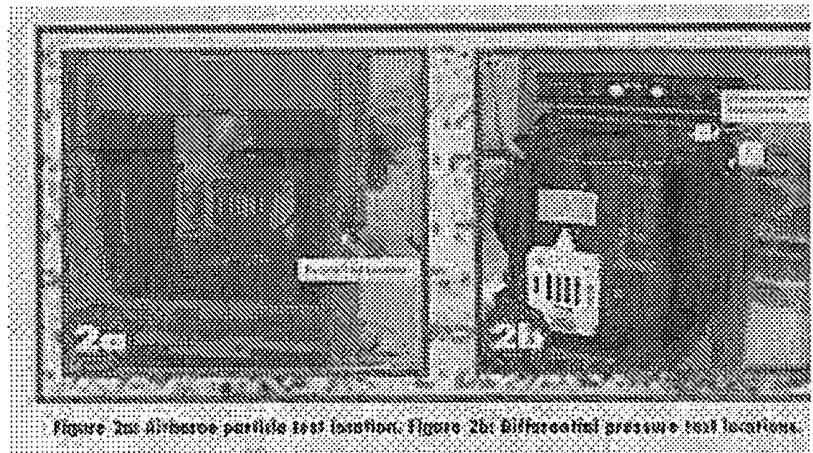

Case	Door Opening	Acceleration (m/s ²)	Distance of Porting (mm)	Gap (mm)
1	one-step	0.25 for 1st 0.5 for 2nd	0.25	2
2	two-step	1.0 for 1st 0.5 for 2nd	0.25	2
3	two-step	1.0 for 1st 0.5 for 2nd	0.25	0.5
4	one-step	0.5	—	2

Table 1: Cases studied.

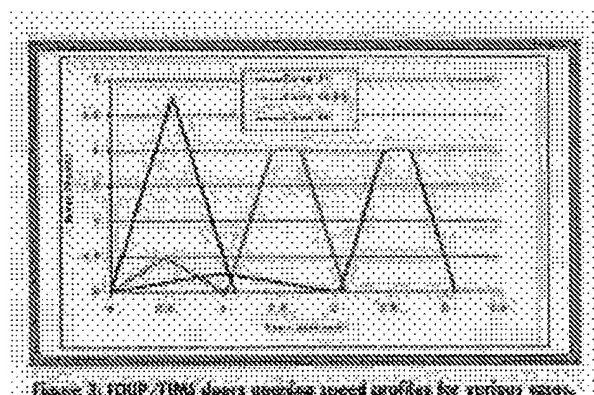


Figure 3: FOUF/FIMS doors acceleration speed profiles for various cases.

Results and Discussion



Figure 4, Cases 1–4, display the differential pressure variation inside the FOUF (Location 1) during a full IsoP advance, SMART port door motion, FOUF door-opening, downward motion, upward motion, FOUF door-closing HOME position). At the instant of FOUF door-opening, a sharp negative differential pressure is observed inside. Conversely, when closing the FOUF a positive differential pressure is observed at the same location. Additional negative differential pressure peaks during the door opening and two positive peaks during the door-closing strokes. The value of the negative differential pressure peak (>0.1 inch-water) is about one order of magnitude greater pressure (0.01 inch-water) between the minienvironment and the ambient. The maximum negative pressure behind the FOUF door) during the door-opening stroke for the various cases is shown in Figure 5. The magnitude of pressure behind the FOUF door for a two-step speed profile is less than that for a one-step profile. Figure 5 minimum negative differential pressure behind the FOUF door corresponds to case #3, which is the lowest acceleration case. The minienvironment differential pressure does not have significant effect on the differential pressure behind the FOUF door during a full IsoPort cycle.

Variations of differential pressure versus time at the gap between the FOUF shell and port plate (location 2) are shown in Figure 6a–6d. The differential pressure decreases at the gap during the door-opening stroke. As shown before, the negative pressure is formed at the instant of door opening. The negative pressure may cause ambient air to enter the FOUF and the gap. For Case #1 and Case #2, the differential pressure dips twice during the two-step door opening as shown in Figure 6a and 6b. On the other hand, for a one-step door-opening speed profile (case #3), the pressure dips only once as shown in Figure 6d. As the gap gets smaller (0.5 mm for case #3), the resistance is much higher, hence there is no apparent differential pressure change as shown in Figure 6c. Differential pressure at location 2 is more when one-step rather than two-step door-opening speed profile is used.

At higher differential pressure (0.01 inch-water) between minienvironment and ambient, no negative differential pressure is detected at the gap when a two-step door opening speed profile is used, as shown in Case #4a. For the one-step profile, a short duration negative differential pressure is observed as shown in Case #4c. When the differential pressure between the minienvironment and the ambient is 0.005 inch-water, short duration negative differential pressure is observed during the two-step door-opening cycle. Therefore, at higher differential pressure between the minienvironment and the ambient, ambient air will be drawn into the minienvironment through the gap.

Airborne particle tests were performed at the location shown in Figure 1. Figure 7 shows the average particle concentration, under different conditions. For Case #3 with a very small gap between the FOUF shell and the Port plate, particles do not enter the minienvironment because of the higher airflow resistance caused by the smaller gap size. The high concentration for this case indicates that it has been caused by entrapment of ambient air between the FOUF and the port plate, when the FIMS door attaches to the FOUF door; the air volume between the two surfaces will be displaced in different directions. With very small gap, the displaced air may not be adequately flushed out of the local area of the gap. When the FOUF door is opened, the negative differential pressure behind the door causes the ambient air to enter the FOUF. With higher minienvironment differential pressure and larger gap, displaced air will be flushed out of the system. Also, higher minienvironment differential pressure can prevent ambient air from entering the enclosure during door-opening. Therefore, low particle concentration can be achieved at higher minienvironment differential pressure and larger gap. It is also observed that the effect of the door-opening speed profile on particle concentration is insignificant at the higher differential pressure, 0.01 inch-water, and 2 mm gap.



Particle per wafer per pass (F³) experiments have been performed at two customer sites. The results clearly indicate that the modified FOUPRIMS door opening speed profile achieves an order of magnitude better VWV results than the standard door speed profile. In addition, more studies are being performed to arrive at an optimized door-opening speed profile to achieve the best cleanliness performance, and shorter cycle time.

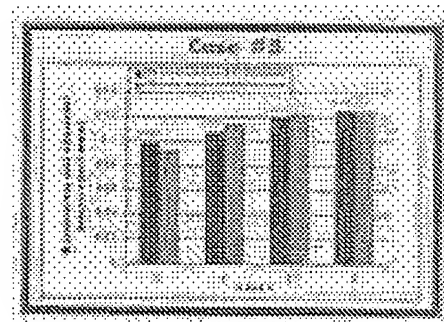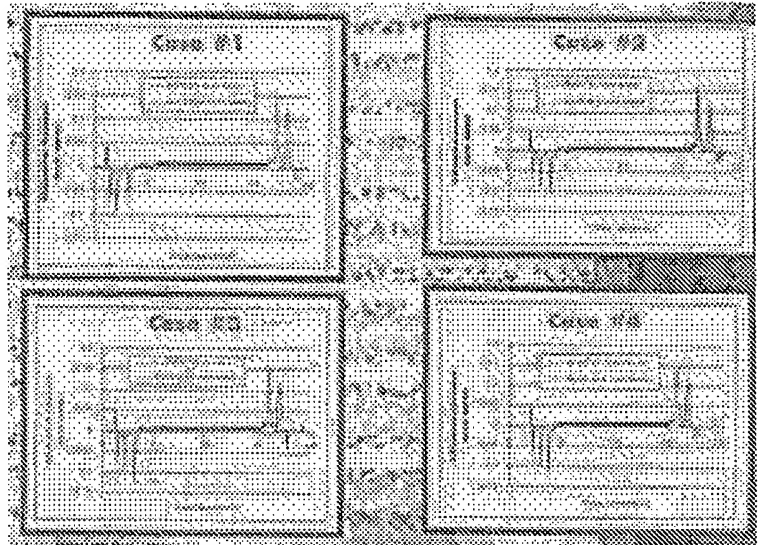

Conclusions

Differential pressure and airborne particle tests are performed for the IsoPort under different integration conditions. From the test results, the following conclusions can be drawn:

- * Negative differential pressure is observed inside the FOUP behind the FOUP door during the door-opening stroke.
- * The magnitude of the negative differential pressure peak is dependent on the door speed profile.
- * At low minienvironment differential pressure (0.005 inch-water) and 2 mm FOUP-loadport gap, ambient air enters the minienvironment through the gap between the FOUP shell and the port plate during the door-opening stroke.
- * There are two possible sources of particle contamination from loadport, one is due to ambient air infiltration between the FOUP shell and the port plate. The other is attributable to the air displaced from between the FOUP and the FIMS door advancement towards the FOUP door.
- * Higher minienvironment differential pressure can prevent ambient air from entering the enclosure during the door-opening stroke.
- * Larger gap, between the FOUP shell and the port plate, can allow displaced ambient air (between FOUP and the FIMS door) to leave the system through the gap.
- * Lower airborne particle concentration for the IsoPort can be achieved at higher minienvironment differential pressure (0.01 inch-water) and larger gap (2 mm).

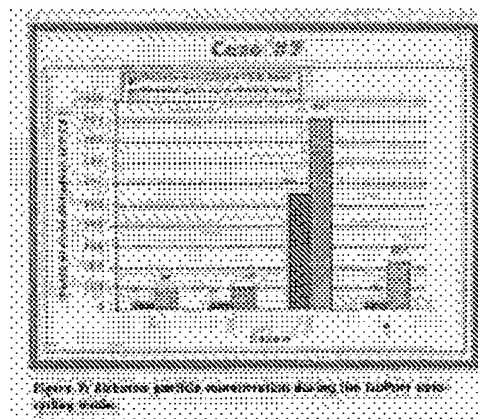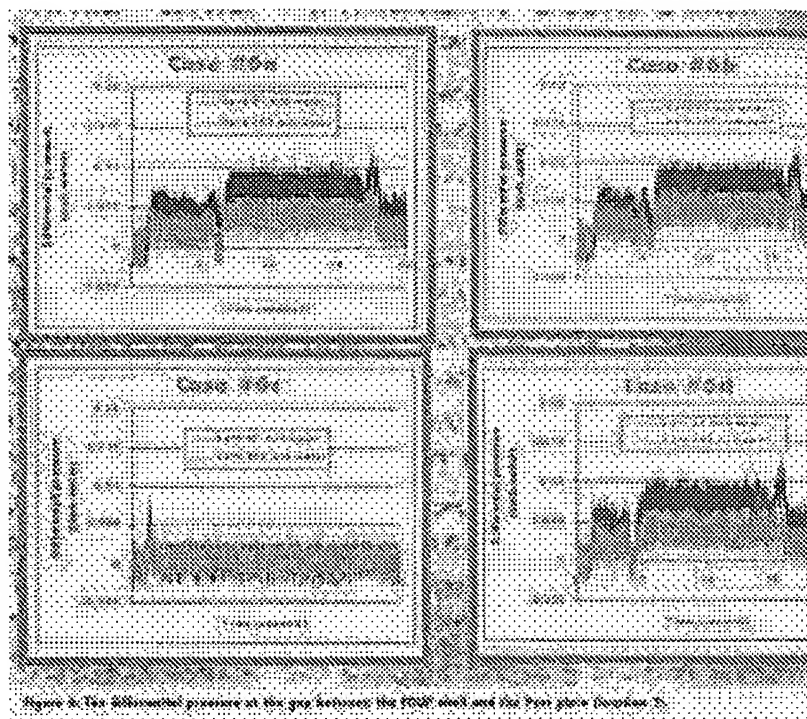

Haifeng Zhang, Ph.D. is Sr. Contamination Control Engineer and Sameer Abu-Zaid Ph.D., P.E. is Sr. Manager, Control at Asyst Technologies, Inc., 48761 Kato Rd, Fremont CA 94538. Dr. Haifeng Zhang can be reached at h Zhang@asyst.com and Dr. Sameer Abu-Zaid at 510- 661-5460 or sabuzaid@asyst.com Email.

Keyword

Free Product Info | Subscribe, Renew, Register | Article Index | Advertising Se:
Web Directory Advertisers | Buyer's Guide | Industry Organizations | Contact Us

Copyright 2004 By Vicon Publishing, Inc. All Rights Reserved
Page Last Modified August 10, 2003
Site Development By S. La Palma Designs@